


Manital Passage Set Template & Fitting Instructions

Always check measure the template before using it to make sure the template measurements are accurate. Templates can shrink with printing!

For Passage Sets Only (excluding York, Techna, Flash)

1. Mark Door at 60mm backset from door edge.
2. Drill spindle centre hole 16-20mm in diameter.
3. If latch being used has correct holes in body for connecting screws to pass through latch, drill 2 x 6mm diameter holes at **A & B**. Note: if the latch being used does **not** have through fixing holes in it's body, drill 2 x 6mm for the connecting screws diagonally (stradling the latch) 40mm apart (or 20mm either side of the centre of the spindle hole) at **C & D**, or **E & F**.
4. Mark the centre-line for the latch hole in the door edge. Drill 25mm diameter hole for the latch and check out the door edge for the face plate.

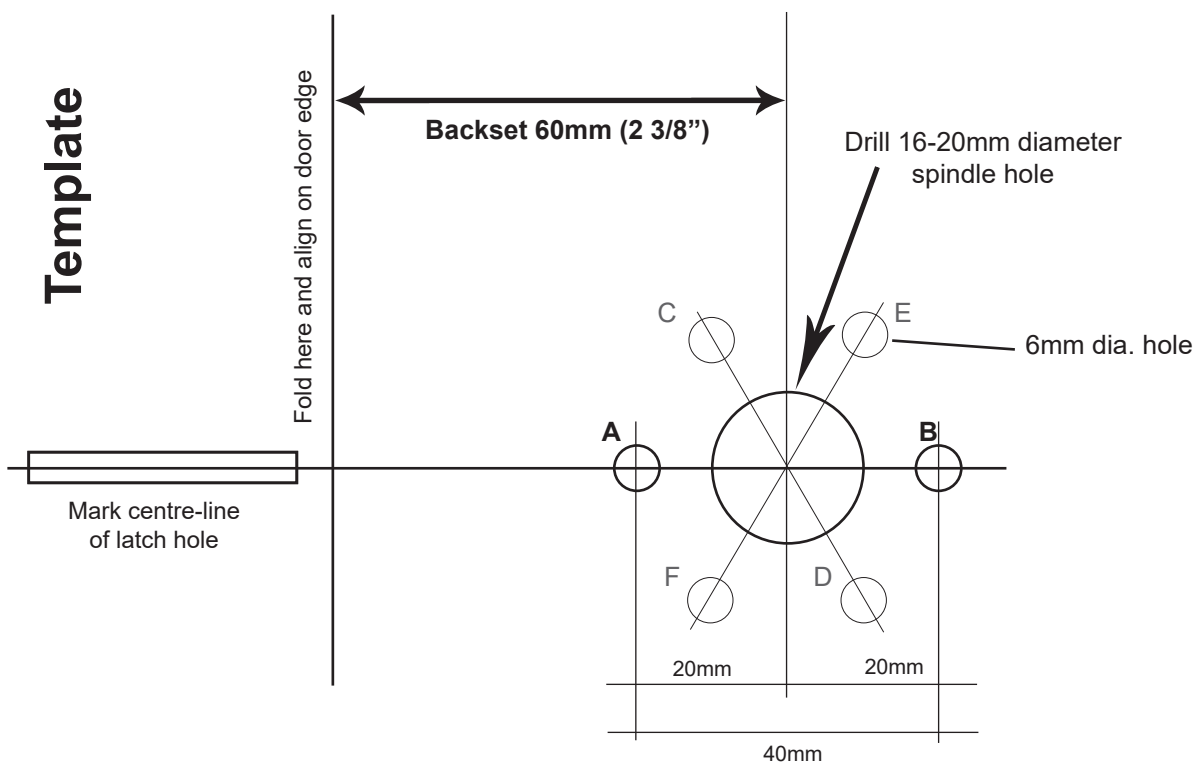

5. Insert latch into door edge and fix with wood screws.
6. Insert 7.6mm thick spindle (95mm or 105mm in length) through the centre of the latch cam.
7. Remove cover plates from the lever rosettes (for square rosette, loosen the grub screw on the underside of the rosette to release).
8. Mount the levers over the spindle on both sides of the door and secure with the threaded brass posts and machine screws. If your latch has through fixing holes, fit the post and screws though holes A & B. Other fit through holes C & D or E & F.
9. Fit the cover plates to the lever rosettes (for square rosette, tighten the grub screw on the underside of the cover plate).
10. Secure the levers to the spindle by tightening the grub screws on the lever neck on both sides of the door.
11. Check that the levers function correctly.